

All Steps below assume that the InReach is connected to a Satellite and turned on. All Steps begin at the Home Screen (shows the time and date).

There are four buttons on the device. Right Side: OK and Back. Left Side: Up and Down

## MESSAGES

### To Send a Preset Message (Unlimited)

Preset Messages can be edited online

1. OK (Send Message)
2. Down 1x (Check In)
3. Up or Down to select a Preset message
4. Once a message is selected, press OK
5. Press OK again to Send

### To Send a Quick Text Message (Fee after 10)

Quick Text Messages can be edited online

1. OK (Send Message), then OK again
2. Down to select a Contact, then OK
3. Up until Next is selected, then OK
4. Down to choose the message
5. Press OK 3x to Send

### To Send a Custom Message (Fee after 10)

1. OK (Send Message), then OK again
2. Down to select a Contact, then OK
3. Up until Next is selected, then OK 2x
4. Select letters to type, then hit OK
5. Repeat until the message is complete
6. Scroll Up to the Check Mark, then OK 2x

To send a message using the Garmin Explore App, pair your phone to the InReach, open the App, and use the messaging feature.

## POSITION AND COMPASS

### To Find Your Position (Latitude & Longitude)

1. Press OK
2. Down 3x to Navigate, then OK
3. Down 2x to Coordinates, then OK

### To Use the Compass

1. Down 3x to the Navigation Widget
2. Press OK
3. Down 1x to the Compass

The above are a select few of the many InReach Mini 2 features

